



16892 146th St SE, Monroe, WA 98272  
Phone (360) 453-2030 Fax (360) 453-2031

# AccuTech™

## Pyrometer Instructions

Plug the probe into the top of the pyrometer. Notice the wide and narrow spades. If the unit reads backwards (temps displayed goes down with increased temp) it is plugged in backwards. The unit will not display without the probe.

These pyrometers will auto-shutoff after 30 minutes. There is also a low battery indicator on the display. Replace with an alkaline 9 volt in the rear.

To use the **MAX / MIN** functions push the button once. The unit will display the highest temp reached. Push again for **MIN**. To clear, hold button for 3 seconds.

To use **HOLD** push button once. Temp will stay until you push **HOLD** again.

To use **▲REL**: This function will tell you the difference between 2 temp readings – for example between the inside and outside of a tire or the front to the rear. Take the first temp and push the button once. The display will go to 0. Take the second temp. The display will read the difference + or -. Push the button again to clear.

Be careful with the probe tip. To get rapid temp response it must be small. With careful use it will last for years. Do not bend it sideways. Always push it straight into the tire and pull straight out.

